



LOVATO ELECTRIC S.P.A.

24020 GORLE (BERGAMO) ITALIA
VIA DON E. MAZZA, 12
TEL. 035 4282111
TELEFAX (Nazionale): 035 4282200
TELEFAX (International): +39 035 4282400
Web www.LovatoElectric.com
E-mail info@LovatoElectric.com

(I) CONTROLLI ANTINCENDIO

Domande frequenti



FIRE PUMP CONTROLLERS

Frequently asked questions

FFL700EP, FFL800EP

I controllori per elettropompa antincendio serie FFL...EP possono controllare pompe monofase?

Si, è possibile comandare sia pompe trifase che monofase. Nel caso di pompe monofase, tipicamente presenti in ambienti civili e residenziali, è sufficiente collegare un solo trasformatore di corrente ed impostare i seguenti parametri: P02.01 = tensione nominale di impianto (es. 230V), P02.02 = L1-N, P02.08 = 1 TA-L1.

Is it possible to control single-phase pumps with FFL...EP series of electric fire pump controllers?

Yes, it is possible to control three-phase or single-phase pumps. In case of single-phase pumps, typically used in residential and civil ambient, it is necessary to connect just one current transformer and set the following parameters: P02.01 = rated system voltage (e.g. 230V), P02.02 = L1-N, P02.08 = 1 CT-L1.