



LOVATO ELECTRIC S.P.A.

24020 GORLE (BERGAMO) ITALIA
VIA DON E. MAZZA, 12
TEL. 035 4282111
E-mail info@LovatoElectric.com
Web www.LovatoElectric.com


- I** ISTRUZIONI DI MONTAGGIO PER OTTENERE CONTATTORI BFK
(Accessori G460-G464-BFX10K3-BFX10K4)
- GB** ASSEMBLY INSTRUCTIONS TO OBTAIN BFK CONTACTORS
(Change kit G460-G464-BFX10K3-BFX10K4)
- D** ANWEISUNG FÜR DIE UMSTELLUNG IM SCHÜTZ BFK
(Zubehör G460-G464-BFX10K3-BFX10K4)
- E** INSTRUCCIONES DE MONTAJE PARA OBTENER
CONTACTORES BFK (accesorios G460, G464, BFX10K3-BFX10K4)




11 G460 + BF09...A	=	BFK09
11 G460 + BF12...A	=	BFK12
11 G460 + BF18...A	=	BFK18
11 G460 + BF2600A	=	BFK26
11 G460 + BF3200A	=	BFK32
11 G460 + BF3800A	=	BFK38

BFX10K3 + BF5000A	=	BFK50
BFX10K3 + BF6500A	=	BFK65
BFX10K3 + BF8000A	=	BFK80
BFX10K4 + BF9500A	=	BFK95
BFX10K4 + BF11500A	=	BFK115
BFX10K4 + BF15000A	=	BFK150


1

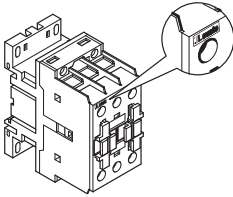

2


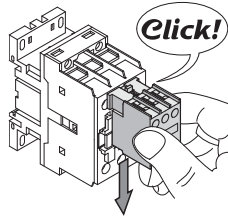


3

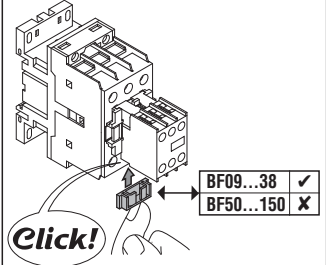


4A





BFK09...BFK38

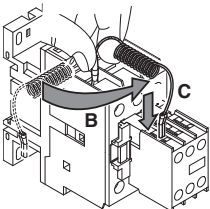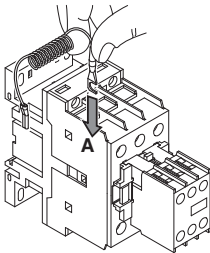

4B

BFK50...BFK150

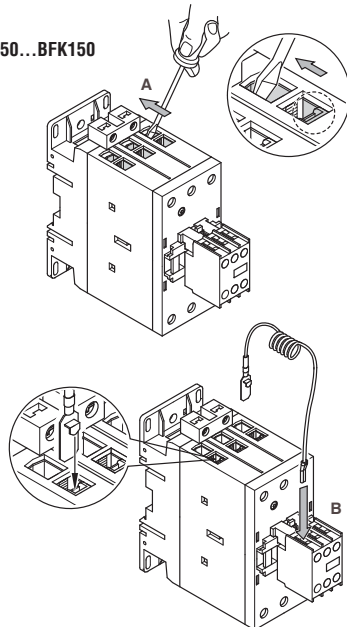

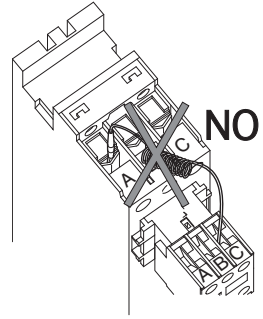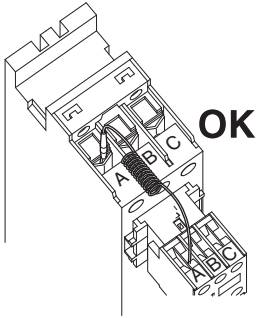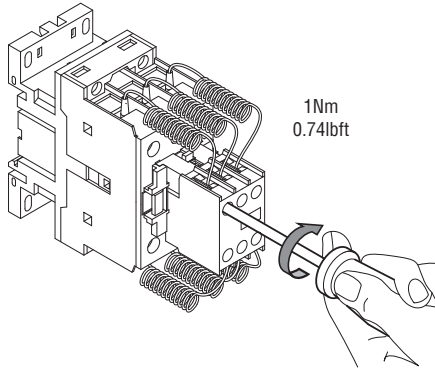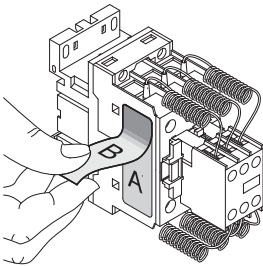5**6****7**

A	B
BF09...A	BFK09...A
BF12...A	BFK12...A
BF18...A	BFK18...A
BF2600A	BFK2600A
BF3200A	BFK3200A
BF3800A	BFK3800A
BF5000A	BFK5000A
BF6500A	BFK6500A
BF8000A	BFK8000A
BF9500A	BFK9500A
BF11500A	BFK11500A
BF15000A	BFK15000A

8