

**LOVATO ELECTRIC S.P.A.**

24020 GORLE (BERGAMO) ITALY  
VIA DON E. MAZZA, 12  
TEL. +39 035 4282111  
FAX (Italy): +39 035 4282200  
FAX (International): +39 035 4282400  
E-mail info@LovatoElectric.com  
Web www.LovatoElectric.com


**GB INTERFACE PROTECTION SYSTEM**
**Operating manual**
**PMVF 51**

**WARNING!**

- Carefully read the manual before the installation or use.
- This equipment is to be installed by qualified personnel, complying to current standards, to avoid damages or safety hazards.
- Before any maintenance operation on the device, remove all the voltages from measuring and supply inputs and short-circuit the CT input terminals.
- The manufacturer cannot be held responsible for electrical safety in case of improper use of the equipment.
- Products illustrated herein are subject to alteration and changes without prior notice. Technical data and descriptions in the documentation are accurate, to the best of our knowledge, but no liabilities for errors, omissions or contingencies arising there from are accepted.
- A circuit breaker must be included in the electrical installation of the building. It must be installed close by the equipment and within easy reach of the operator. It must be marked as the disconnecting device of the equipment: IEC/EN 61010-1 § 6.11.2.
- Clean the device with a soft dry cloth; do not use abrasives, liquid detergents or solvents.


**ATTENTION !**

- Lire attentivement le manuel avant toute utilisation et installation.
- Ces appareils doivent être installés par un personnel qualifié, conformément aux normes en vigueur en matière d'installations, afin d'éviter de causer des dommages à des personnes ou choses.
- Avant toute intervention sur l'instrument, mettez les entrées de mesure et d'alimentation hors tension et court-circuitez les transformateurs de courant.
- Le constructeur n'assume aucune responsabilité quant à la sécurité électrique en cas d'utilisation impropre du dispositif.
- Les produits décrits dans ce document sont susceptibles d'évoluer ou de subir des modifications à n'importe quel moment. Les descriptions et caractéristiques techniques du catalogue ne peuvent donc avoir aucune valeur contractuelle.
- Un interrupteur ou disjoncteur doit être inclus dans l'installation électrique du bâtiment. Celui-ci doit se trouver tout près de l'appareil et l'opérateur doit pouvoir y accéder facilement. Il doit être marqué comme le dispositif d'interruption de l'appareil : IEC/EN 61010-1 § 6.11.2.
- Nettoyer l'appareil avec un chiffon doux, ne pas utiliser de produits abrasifs, détergents liquides ou solvants.


**ACHTUNG!**

- Dieses Handbuch vor Gebrauch und Installation aufmerksam lesen.
- Zur Vermeidung von Personen- und Sachschäden dürfen diese Geräte nur von qualifiziertem Fachpersonal und unter Befolgung der einschlägigen Vorschriften installiert werden.
- Vor jedem Eingriff am Instrument die Spannungszufuhr zu den Messeingängen trennen und die Stromwandler kurzschließen.
- Bei zweckwidrigem Gebrauch der Vorrichtung übernimmt der Hersteller keine Haftung für die elektrische Sicherheit.
- Die in dieser Broschüre beschriebenen Produkte können jederzeit weiterentwickelt und geändert werden. Die im Katalog enthaltenen Beschreibungen und Daten sind daher unverbindlich und ohne Gewähr.
- In die elektrische Anlage des Gebäudes ist ein Ausschalter oder Trennschalter einzubauen. Dieser muss sich in unmittelbarer Nähe des Geräts befinden und vom Bediener leicht zugänglich sein. Er muss als Trennvorrichtung für das Gerät gekennzeichnet sein: IEC/EN 61010-1 § 6.11.2.
- Das Gerät mit einem weichen Tuch reinigen, keine Scheuermittel, Flüssigreinerer oder Lösungsmittel verwenden.


**ADVERTENCIA**

- Leer atentamente el manual antes de instalar y utilizar el regulador.
- Este dispositivo debe ser instalado por personal cualificado conforme a la normativa de instalación vigente a fin de evitar daños personales o materiales.
- Antes de realizar cualquier operación en el dispositivo, desconectar la corriente de las entradas de alimentación y medida, y cortocircuitar los transformadores de corriente.
- El fabricante no se responsabilizará de la seguridad eléctrica en caso de que el dispositivo no se utilice de forma adecuada.
- Los productos descritos en este documento se pueden actualizar o modificar en cualquier momento. Por consiguiente, las descripciones y los datos técnicos aquí contenidos no tienen valor contractual.
- La instalación eléctrica del edificio debe disponer de un interruptor o disyuntor. Este debe encontrarse cerca del dispositivo, en un lugar al que el usuario pueda acceder con facilidad. Además, debe llevar el mismo marcado que el interruptor del dispositivo (IEC/EN 61010-1 § 6.11.2).
- Limpiar el dispositivo con un trapo suave; no utilizar productos abrasivos, detergentes líquidos ni disolventes.


**UPOZORNĚNÍ**

- Návod se pozorně pročtěte, než začnete regulátor instalovat a používat.
- Tato zařízení smí instalovat kvalifikovaní pracovníci v souladu s platnými předpisy a normami pro předcházení úrazů osob či poškození věcí.
- Před jakýmkoli zásahem do přístroje odpojte měřicí a napájecí vstupy od napětí a zkratujte transformátory proudu.
- Výrobce nenese odpovědnost za elektrickou bezpečnost v případě nevhodného používání regulátoru.
- Výrobky popsané v tomto dokumentu mohou kdykoli projít úpravami či dalším vývojem. Popisy a údaje uvedené v katalogu nemají proto žádnou smluvní hodnotu.
- Spínač či odpojovač je nutno zabudovat do elektrického rozvodu v budově. Musejí být nainstalované v těsné blízkosti přístroje a snadno dostupné pracovním obsluhy. Je nutno ho označit jako vypínací zařízení přístroje: IEC/EN 61010-1 § 6.11.2.
- Přístroj čistěte měkkou utěrkou, nepoužívejte abrazivní produkty, tekutá čisticí či rozpouštědla.


**AVERTIZARE!**

- Cititi cu atenție manualul înainte de instalare sau utilizare.
- Acest echipament va fi instalat de personal calificat, în conformitate cu standardele actuale, pentru a evita deteriorări sau pericolele.
- Înainte de efectuarea oricărei operațiuni de întreținere asupra dispozitivului, îndepărtați toate tensiunile de la intrările de măsurare și de alimentare și scurtcircuitați bornele de intrare CT.
- Producătorul nu poate fi considerat responsabil pentru siguranța electrică în caz de utilizare incorectă a echipamentului.
- Produsele ilustrate în prezentul sunt supuse modificărilor și schimbărilor fără notificare anterioară. Datele tehnice și descrierile din documentație sunt precise, în măsura cunoștințelor noastre, dar nu se acceptă nicio răspundere pentru erorile, omisiunile sau evenimentele neprevăzute care apar ca urmare a acestora.
- Trebuie inclus un disjuncteur în instalația electrică a clădirii. Acesta trebuie instalat aproape de echipament și într-o zonă ușor accesibilă operatorului. Acesta trebuie marcat ca fiind dispozitivul de deconectare al echipamentului: IEC/EN 61010-1 § 6.11.2.
- Curățați instrumentul cu un material textil moale și uscat; nu utilizați substanțe abrazive, detergenți lichizi sau solvenți.


**ATTENZIONE!**

- Leggere attentamente il manuale prima dell'utilizzo e l'installazione.
- Questi apparecchi devono essere installati da personale qualificato, nel rispetto delle vigenti normative impiantistiche, allo scopo di evitare danni a persone o cose.
- Prima di qualsiasi intervento sullo strumento, togliere tensione dagli ingressi di misura e di alimentazione e cortocircuire i trasformatori di corrente.
- Il costruttore non si assume responsabilità in merito alla sicurezza elettrica in caso di utilizzo improprio del dispositivo.
- I prodotti descritti in questo documento sono suscettibili in qualsiasi momento di evoluzioni o di modifiche. Le descrizioni ed i dati a catalogo non possono pertanto avere alcun valore contrattuale.
- Un interruttore o disgiuntore va compreso nell'impianto elettrico dell'edificio. Esso deve trovarsi in stretta vicinanza dell'apparecchio ed essere facilmente raggiungibile da parte dell'operatore. Deve essere marchiato come il dispositivo di interruzione dell'apparecchio: IEC/EN 61010-1 § 6.11.2.
- Pulire l'apparecchio con panno morbido, non usare prodotti abrasivi, detergenti liquidi o solventi.


**UWAGA!**

- Przed użyciem i instalacją urządzenia należy uważnie przeczytać niniejszą instrukcję.
- W celu uniknięcia obrażeń osób lub uszkodzenia mienia tego typu urządzenia muszą być instalowane przez wykwalifikowany personel, zgodnie z obowiązującymi przepisami.
- Przed rozpoczęciem jakichkolwiek prac na urządzeniu należy odłączyć napięcie od wejść pomiarowych i zasilania oraz zewrzeć zaciski przekładnika prądowego.
- Producent nie przyjmuje na siebie odpowiedzialności za bezpieczeństwo elektryczne w przypadku niewłaściwego użytkowania urządzenia.
- Produkty opisane w niniejszym dokumencie mogą być w każdej chwili udoskonalone lub zmodyfikowane. Opisy oraz dane katalogowe nie mogą mieć w związku z tym żadnej wartości umownej.
- W instalacji elektrycznej budynku należy uwzględnić przelącznik lub wyłącznik automatyczny. Powinien on znajdować się w bliskim sąsiedztwie urządzenia i być łatwo osiągalny przez operatora. Musi być oznaczony jako urządzenie służące do wyłączania urządzenia: IEC/EN 61010-1 § 6.11.2.
- Urządzenie należy czyścić miękką szmatką, nie stosować środków ściernych, płynnych detergentów lub rozpuszczalników.


**注意！**

- 仪器管察使用：请仔细阅读本手册。
- 设备只能由合格人员根据现行标准进行安装。否则可能导致损坏或安全危害。
- 对设备进行任何维护操作前：请切断电压测量和电源输入端子电压。并短路 CT 输入端子。
- 制造商不负责因设备使用不当导致的电气安全问题。
- 产品说明如有变动和变化，恕不另行通知。我们竭力确保技术数据和描述是准确的，但对错误、遗漏或由此引起的意外事件概不负责。
- 电气装置中必须装有断路器。断路器必须安装在靠近设备且方便操作人员触及的地方。还必须将断路器标记为设备的断开装置：IEC/EN 61010-1 § 6.11.2。
- 请使用柔软的干布清洁设备；切勿使用研磨剂、洗涤剂或溶剂。


**ПРЕДУПРЕЖДЕНИЕ!**

- Прежде чем приступать к монтажу или эксплуатации устройства, внимательно ознакомьтесь с содержанием настоящего руководства.
- Во избежание травм или материального ущерба монтаж должен осуществляться только квалифицированным персоналом в соответствии с действующими нормативами.
- Перед проведением любых работ по техническому обслуживанию устройства необходимо обесточить все измерительные и питающие входные контакты, а также замкнуть накоротко входные контакты трансформатора тока (ТТ).
- Производитель не несет ответственность за обеспечение электробезопасности в случае ненадлежащего использования устройства.
- Изделия, описанные в настоящем документе, в любой момент могут подвергнуться изменениям или усовершенствованиям. Поэтому каталожные данные и описания не могут рассматриваться как действительные с точки зрения контрактов.
- Электрическая сеть здания должна быть оснащена автоматическим выключателем, который должен быть расположен вблизи оборудования в пределах доступа оператора. Автоматический выключатель должен быть промаркирован как отключающее устройство оборудования: IEC/EN 61010-1 § 6.11.2.
- Очистку устройства производить с помощью мягкой сухой ткани, без применения абразивных материалов, жидких моющих средств или растворителей.


**DIKKAT!**

- Montaj ve kullanımdan önce bu el kitabını dikkatlice okuyunuz.
- Bu aparatın kişilere veya nesnelere zarar verme ihtimaline karşı yürürlükte olan sistem kurma normlarına göre kalifiye personel tarafından monte edilmelidir.
- Aparata (cihaz) herhangi bir müdahalede bulunmadan önce ölçüm girişlerinde gerilimi kesin akım transformatörlerinede kısa devre yaptırınız.
- Üretici aparatın hatalı kullanımından kaynaklanan elektriksel güvenliği ait sorumluluk kabul etmez.
- Bu dokümanda tarif edilen ürünler her an evrimlere veya değişimlere açıktır. Bu sebeple katalogdaki tarif ve deęerler herhangi bir baęlayıcı deęeri haiz deęildir.
- Üretici elektrik sisteminde bir anahtar veya şalter bulunmalıdır. Bu anahtar veya şalter operatörün kolaylıkla ulaşabileceği yakın bir yerde olmalıdır. Aparat (cihaz) devreden çıkartma görevi yapan bu anahtar veya şalterin markası: IEC/EN 61010-1 § 6.11.2.
- Aparatı (cihaz) sıvı deterjan veya solvent kullanılarak yumuşak bir bez ile siliniz aşındırıcı temizlik ürünleri kullanmayınız.



CONTENTS	Page		Page
Introduction	2	Alarm indications	9
Description	2	Self-diagnosis	9
Trip thresholds	2	Current, power and energy measurements	9
Front button functions	3	Power Imbalance Limit (LSP) control	9
Displaying measurements	3	Communication	10
Table of display pages	4	Connection schemes	10
Main menu	5	Backup activation modes	11
Password-protected access	5	Terminal layout	11
Setting parameters (set-up)	5	Mechanical dimensions	11
Parameter table	6	Technical specifications	12
Commands Menu	8		

## INTRODUCTION

The PMVF 51 equipment has been designed as an Interface Protection System (SPI) in accordance with the CEI 0-21 standard (September 2014), amendment CEI 0-21;V1 (December 2014). It can be applied to all LV micro-generation systems (photovoltaic, wind) where it is used to control the Interface Device (DDI) between generation system and public grid.

In the event of problems on the grid (e.g. due to maintenance), the system intervenes in a timely fashion, opening the Interface Device (e.g. contactor) and isolating the generation system.

In the event of Interface Device (DDI) failure, it can also control a backup device to disconnect the generation system in any case.

The equipment features 4 digital inputs permitting the connection of the system to the signals provided by the network operator to meet the requirements of the current regulations.

The functions implemented and the possibility of further expansion ensure that it is prepared for any developments to the protection system.

The PMVF 51 equipment is supplied already programmed and assembled. With the factory settings, once the connections have been made, it is already ready for operation in compliance with the requirements of the CEI 0-21;V1 standard (December 2014) without requiring any further settings to be made. It is nevertheless prepared for any future changes to the operating parameters. Changes to the settings are password protected, preventing tampering by unauthorised personnel.

## DESCRIPTION

- Modular construction for DIN rail, 6 units.
- LCD graphic 128x80 pixel, backlight, 4 grey levels.
- 4 display and setting buttons.
- Voltage measuring inputs three-phase + neutral.
- Possibility of operation in the following line configurations:
  - Three-phase with neutral, VL-L voltage controls (default).
  - Three-phase with neutral, VL-N voltage controls.
  - Three-phase without neutral, VL-L voltage controls.
  - Single-phase, VL-N voltage control.
- 2 switching-relay outputs to control:
  - OUT1: DDI (Interface Device) coil control.
  - OUT2: Backup device control.
- 4 contact digital inputs for:
  - INP1: DDI feedback input (auxiliary closure indication contact).
  - INP2: Local control input.
  - INP3: Remote frequency threshold selection input (external signal).
  - INP4: Intertripping control input.
- Optional power imbalance limit (LSP) threshold control.
- Settings lock via 2-level changeable password.
- Optional additional measurements, via connection of external CTs:
  - Currents.
  - Powers.
  - Energies supplied.
- Set up for future installation of IEC 61850 Interface module.
- Optional power imbalance limit (LSP) threshold control in two possible modes:
  - DDI trip (OUT1) when LSP exceeded.
  - Separate output switching (OUT3) on additional expansion module for LSP trip indication.
- Programmable multifunctional output (OUT4) on additional expansion module.

## TRIP THRESHOLDS


- Below are the voltage and frequency trip thresholds for which the equipment is set up according to the factory defaults, which correspond to the default requirements of the CEI 0-21 standard.

Voltage measurement type	Voltage threshold	Default (%)	Type	Trip	Trip delay	Default (s)
INSTANTANEOUS	$V > 59.S2$	$V > 115\%$	MAX	YES	DEL 59.S2	0.20 s
MOVING AVERAGE 10 min	$V_{med} > 59.S1$	$V_{med} > 110\%$	MAX	YES	DEL 59.S1	3.00 s
INSTANTANEOUS	$27.S1 \leq V \leq 59.S1$	$85\% \leq V \leq 110\%$	OK	NO	—	—
INSTANTANEOUS	$27.S2 \leq V < 27.S1$	$40\% \leq V < 85\%$	MIN	YES	DEL 27.S1	0.40 s
INSTANTANEOUS	$V < 27.S2$	$V < 40\%$	MIN	YES	DEL 27.S2	0.20 s

- The frequency thresholds and corresponding delays may vary in accordance with the state of the input signals named Local Control and External Signal.
- A condition with both signals OFF is not envisaged/defined. Should it occur, the equipment will provide an alarm indication.
- The table indicating trip thresholds and times in the conditions envisaged follows:

External Signal	Local Control	Min. F threshold	Default (Hz)	Fmin delay	Default (s)	Max. F threshold	Default (Hz)	Max. F delay	Default (s)
ON	OFF	$81 < .S2$	47.50 Hz	DEL C FMIN	0.10 s	$81 > .S2$	51.50 Hz	DEL C FMAX	0.10 s
OFF	ON	$81 < .S2$	47.50 Hz	DEL L FMIN	4.00 s	$81 > .S2$	51.50 Hz	DEL L FMAX	1.00 s
ON	ON	$81 < .S1$	49.50 Hz	DEL C FMIN	0.10 s	$81 > .S1$	50.50 Hz	DEL C FMAX	0.10 s

- The thresholds used during SPI operation and the corresponding delays are displayed in a dedicated video page:

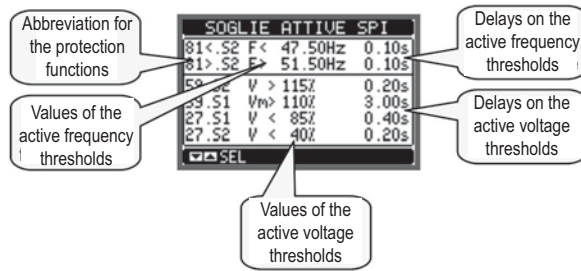


**Note:** For field testing of the thresholds via relay test kit, an Application Notes document has been drawn up containing useful information and suggestions for system installers and inspectors. The document can be requested from our Customer Service office (Tel. + 39 035 4282422; E-mail: service@LovatoElectric.com).

**FRONT BUTTON FUNCTIONS**

- MENU button** - Used to enter or exit the various display and set-up menus.
- Buttons ▲ and ▼** - Used to scroll between screens, select from available options on the display and change (increase/decrease) settings.
- Button ✓** - Used to scroll sub-pages, confirm selected options and switch between display modes.


**DISPLAYING MEASUREMENTS**

- The ▲ and ▼ buttons allow the measurement display pages to be scrolled one at a time. The current page is shown on the title bar.
- The first page displayed (main page) contains all the most important information in both numerical and graphical form. The limit thresholds are indicated by a small marker above the graphic bar, while the arrows under the graphic bar indicate the measurement range (HI - LO).

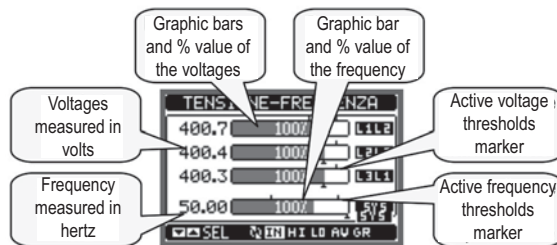

Example of main page

- The next page displays an overview of the state of the Interface Protection System, showing both the state of the outputs to the DDI and backup and the state of the control inputs. The black arrows indicate an active state, the grey ones an inactive state.

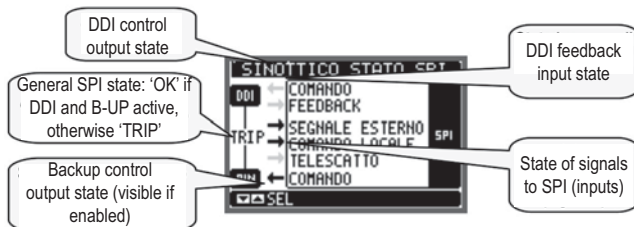

SPI overview page

- Three pages with trip protection counters follow, divided into total trip count, voltage threshold trip count and frequency threshold trip count. The counters can be reset through the Commands Menu.



- In the pages that follow these pages, on the other hand, the measurements are in standard numerical format.  
- Some measurements may not be displayed, depending on the programming and the connection for the device (for example, if programmed for a system without neutral, the measurements relating to neutral are not displayed).



Example of page with numerical indications





- For many pages, the ✓ button permits access to sub-pages (for example, to display the maximum and minimum values recorded).
- The sub-page displayed currently is indicated at the bottom left by one of the following icons:
  - **IN = Instantaneous value** – Current instantaneous value of the measurement, displayed by default every time the page is changed.
  - **HI = Maximum instantaneous value** – Highest value measured by the SPI for the corresponding measurement. HIGH values are stored and preserved even in the absence of a power supply. They can be reset through a dedicated command (see COMMANDS MENU on page 8).
  - **AV = Average value** – Average value of the measurements, with slowed variations (average of the last minute).
  - **LO = Minimum instantaneous value** – Lowest value measured by the SPI from the moment voltage is applied. It is reset with the same command used for the HI values.
  - **GR = Graphic bars** – Display of measurements through graphic bars.
- The user can specify the page and sub-page to return to automatically after no buttons have been pressed for a given time.
- It is also possible to program the PMVF 51 so that the display always remains that which was last selected.
- For the set-up of these functions, see MENU M02 – UTILITY on page 7.


TABLE OF DISPLAY PAGES

No.	Selection via ▲ and ▼ PAGES	Selection via ✓ SUB-PAGES			
		HI	LO	AV	GR
1	<b>VOLTAGES, FREQUENCY</b> V(L1-L2), V(L2-L3), V(L3-L1), F(Hz)				
2	<b>SPI STATE OVERVIEW</b> STATE OF DDI/BACKUP CONTROL OUTPUTS, FEEDBACK INPUTS, EXTERNAL SIGNAL, INTERTRIPPING				
3	<b>ACTIVE THRESHOLDS – DELAYS IN USE</b> V/F THRESHOLDS AND DELAYS CURRENTLY ACTIVE				
4	<b>SPI TRIP COUNTER</b> DDI TRIP CNT, BACKUP TRIP CNT				
5	<b>VOLTAGE THRESHOLD TRIP COUNTERS</b> CNT 59.S2,CNT 59.S1,CNT 27.S1,CNT 59.S2				
6	<b>FREQUENCY THRESHOLD TRIP COUNTERS</b> CNT 81>.S2, CNT 81>.S1, CNT 81<.S1, CNT 81<.S2				
7	<b>PHASE-TO-PHASE VOLTAGES</b> V(L1-L2), V(L2-L3), V(L3-L1), V(LL)EQV	HI	LO	AV	GR
8	<b>PHASE-TO-NEUTRAL VOLTAGES</b> V(L1-N), V(L2-N), V(L3-N), V(L-N)EQV	HI	LO	AV	GR
9	<b>MOVING AVERAGE VOLTAGE</b> VM(L1-L2), VM(L2-L3), VM(L3-L1)	HI	LO		
10	<b>PHASE AND NEUTRAL CURRENTS</b> I(L1), I(L2), I(L3), I(N)	HI	LO	AV	GR
11	<b>ACTIVE POWER</b> P(L1), P(L2), P(L3), P(TOT)	HI	LO	AV	GR
12	<b>ACTIVE POWER IMBALANCE</b> kWP1-P2, kWP2-P3, kW P3-P1	HI	LO	AV	GR
13	<b>TREND GRAPH</b> P(TOT) LAST 24h				
14	<b>ACTIVE ENERGY – ACTIVE POWER – BAR GRAPH</b> kWh (TOT) – kW (TOT) – BAR GRAPH kW(TOT)				
15	<b>REACTIVE POWER</b> Q(L1), Q(L2), Q(L3), Q(TOT)	HI	LO	AV	GR
16	<b>APPARENT POWER</b> S(L1), S(L2), S(L3), S(TOT)	HI	LO	AV	GR
17	<b>POWER FACTOR</b> PF(L1), PF(L2), PF(L3), PF(TOT)	HI	LO	AV	GR
18	<b>ENERGY METERS</b> kWh+(TOT), kWh-(TOT), kvarh+(TOT), kvarh-(TOT), kVA(TOT)				PARTIAL
19	<b>ENERGY METERS PHASE L1</b> kWh+L1(TOT), kWh-L1(TOT)				PARTIAL
20	<b>ENERGY METERS PHASE L2</b> kWh+L2(TOT), kWh-L2(TOT)				PARTIAL
21	<b>ENERGY METERS PHASE L3</b> kWh+L3(TOT), kWh-L3(TOT)				PARTIAL
22	<b>EXPANSION MODULES</b>				
23	<b>INFO-REVISION-SERIAL NO.</b> MODEL, REV SW, REV HW, SER. No.				
24	<b>LOGO</b>				

- **Note:** Some of the pages listed above may not be displayed, if the function displayed is not enabled. For example, if external CTs are not connected and programmed, the pages highlighted in blue are not displayed.
- **Note:** The moving average voltage measurement is not available for the first 10 minutes after switching on or resetting the system. During this time, dashes and a countdown indicating the time left before measurement display are shown.


**MAIN MENU**

- The main menu consists of a set of graphic icons which allow rapid access to measurements and settings.
- Starting from the normal measurement display, press the **MENU** button. The display shows the quick menu (see figure below).
- Press **▲** or **▼** to select the desired function. The selected icon is highlighted and the message in the middle of the display indicates the description of the function.
- Press **✓** to activate the selected function.
- If some functions are not available, the corresponding icon will be deactivated, i.e. greyed out.
-  etc. - Operate as shortcuts which allow quicker access to pages for displaying measurements, going directly to the selected group of measurements, from which it is possible to move forwards and backwards as usual.
-  - Setting the numeric code which permits access to protected functions (setting parameters, executing commands).
-  - Parameter programming access point. See the Setting Parameters (set-up) section on page 5.
-  - Commands Menu access point, where authorised users can perform a number of resetting and restoring operations.

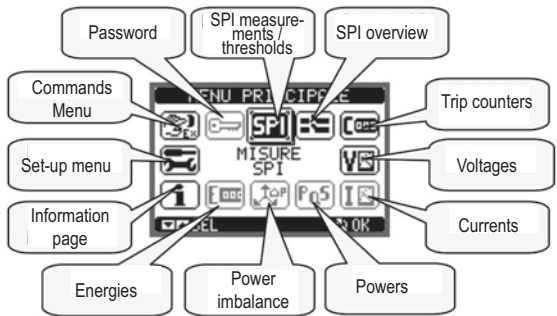


**PASSWORD-PROTECTED ACCESS**

- For new (default) equipment, the password is enabled with the default 1000 (user access) and 2000 (advanced access) codes.
- To modify the access codes, refer to the Setting Parameters (set-up) section on page 5.
- There are two access levels, depending on the code entered:
  - **User-level access** - permits resetting of the recorded values and the display, but not changing, of the equipment's settings.
  - **Advanced-level access** - the same rights as user, with the addition of being able to change the settings.
- In the normal measurements display, press **MENU** to recall the main menu, then select the password icon and press **✓**.
- The password setting window shown below will appear:

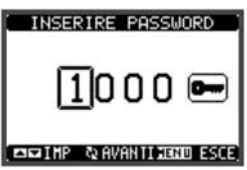


- Press the **▲▼** buttons to change the value of the selected digit.
- Press the **✓** button to confirm the digit and cycle to the next ones.
- Enter the password, then go to the key icon.
- When the password entered corresponds to the User-level or Advanced-level password, the appropriate unlock message appears.
- After the password is unlocked, access will remain enabled until:
  - the equipment is disconnected
  - the equipment is reset after exiting the Setting Parameters (set-up) menu
  - 2 minutes elapse without the operator touching any button.
- Press the **MENU** button to stop setting the password and exit.

**SETTING PARAMETERS (SET-UP)**

- From the standard measurement display, press **MENU** to call up the main menu, then select the  icon and press **✓** to access the Setting Parameters (set-up) menu.
- The table in the figure is displayed, for selecting the set-up sub-menus, in which all the parameters are grouped according to their function.
- Press the **▲▼** buttons to select the desired menu and press **✓** to confirm.
- Press **MENU** to exit and return to the measurement display.
- The available sub-menus are listed in the following table:


Code	MENU	DESCRIPTION
M01	GENERAL	Specifications of the system
M02	UTILITY	Language, brightness, display pages, etc.
M03	PASSWORD	Enablement of protected access
M04	SPI THRESHOLDS	SPI trip thresholds and delays
M05	COMMUNICATION (COMn)	Communication ports
M06	ALARMS	Alarm enablement

- Select the sub-menu and press the **✓** button to display the parameters.
- All parameters are displayed with code, description, current value.

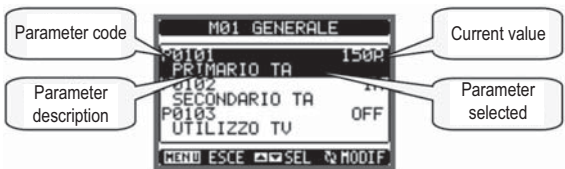

Set-up: parameter selection

- To change the value of a parameter, select it then press ✓.
- If the Advanced-level password has not been entered, it will not be possible to access the modification page, and an access denied message will be displayed.
- If access has been granted, on the other hand, the modification page will be displayed.

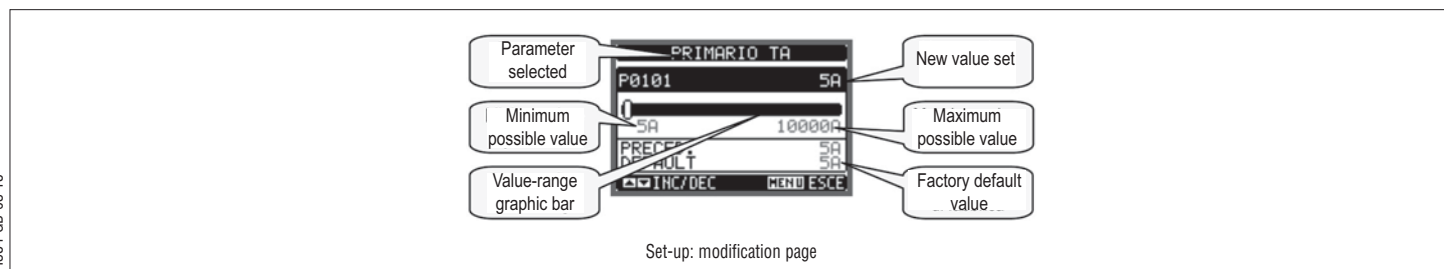

- In modification mode, the value can be changed with the ▲ and ▼ buttons. Also displayed are a graphic bar indicating the setting range, the minimum and maximum values possible, the previous value and the default value.
  - Pressing ▲ and ▼ simultaneously restores the factory default value.
  - Press MENU to return to parameter selection. The value entered is stored.
  - Press MENU again to save the changes and exit set-up. The SPI resets and resumes normal operation.
- ATTENTION:** When restarting following a change to the parameters or commands, the output relays are temporarily de-energised.
- If no buttons are pressed for 2 minutes, the set-up menu is abandoned automatically and the SPI returns to the standard display.

## PARAMETER TABLE

M01 - GENERAL		UoM	Default	Range
P01.01	CT primary	A	OFF	OFF/1-10000
P01.02	CT secondary	A	5	1-5
P01.03	Voltage connection / control		Three-phase+N / VLL	Three-phase+N / VL-L Three-phase+N / VL-N Three-phase / VL-L Single-phase+N / VL-N
P01.04	Rated system power	kW	AUT	AUT/ 1-10000
P01.05	DDI activation delay time after switching on SPI	s	4,00	4,00 – 300,00
P01.06	Power imbalance limit LSP control output		OFF	OFF OUT1 OUT3 OUT1 + OUT3
P01.07	LSP threshold 1	kW	6,0	OFF / 1.0 – 10.0
P01.08	LSP delay time 1	s	1800	1 - 3600
P01.09	LSP threshold 2	kW	10,0	OFF / 1.0 – 20.0
P01.10	LSP delay time 2	s	60	1 - 3600
P01.11	Automatic LSP restore time	min	5	OFF / 1- 60
P01.12	OUT4 output function		B-UP	OFF DDI B-UP LSP Global Alarm Threshold 59.S1 Threshold 59.S2 Threshold 27.S1 Threshold 27.S2 Threshold 81>.S1 Threshold 81>.S2 Threshold 81<.S1 Threshold 81<.S2 Alarm A01 Alarm A02 Alarm A03 Alarm A04 Alarm A05 Alarm A06
P01.13	Backup control mode		MODE A	OFF MODE A MODE B MODE C
P01.14	Backup control pulse duration	s	3,0	1,0 - 60,0

**P01.01** – Rated current of CT primary winding. If CTs are not fitted, leave at OFF. The pages on currents and powers are displayed only when CTs are used.

**P01.02** – Current of CT secondary winding.

**P01.03** – Type of connection and type of voltage control. Program in line with the wiring.

**P01.04** – Rated active power of system. If set to AUT, the value is calculated by multiplying P01.01 \* 230 \* 3 (phase current \* phase voltage \* 3 phases).

**P01.05** – DDI energising delay time after applying voltage to PMVF 51.

**P01.06** – LSP protection control output selection – On OUT1 (DDI opening), independent on OUT3 or on both.

**P01.07-08** – First-level LSP (LSP1) threshold and delay.

**P01.09-10** – Second-level LSP (LSP2) threshold and delay.

**P01.11** – Defines the automatic restore time after LSP tripping. If set to off, the system can only be restored manually by pressing the ▲ ▼ buttons.

**P01.12** – Defines the function of the OUT4 output from those listed. The output is understood to be activated when conditions are normal (threshold not exceeded, alarm not active, etc.).

**P01.13** – Defines the backup control mode, according to the logic in the Backup Activation Modes diagram on the final pages of this manual. If the backup is not used, set to OFF.

**P01.14** – Backup opening pulse duration, when used in MODE C.



M02 – UTILITY		UoM	Default	Range
P02.01	Language		Italiano	English Italiano
P02.02	LCD contrast	%	60	0-100
P02.03	Display backlighting intensity high	%	100	0-100
P02.04	Display backlighting intensity low	%	30	0-50
P02.05	Low backlight delay	s	30	5-600
P02.06	Default page return	s	60	OFF / 10-600
P02.07	Default page		SPI MEASUREMENTS	SPI – SYN – EVE ...
P02.08	Default sub-page		GR	IN / HI / LO / AV / GR
P02.09	Display update time	s	0,5	0,1 – 5,0

**P02.06** – If set to OFF, the display always remains on the page where the user left it. If set to a value, after this time the display returns to the page set with P02.07.

**P02.07** – Abbreviation for the start page on switching on and that the display returns to automatically once the time P02.06 since a button was last pressed has elapsed.

**P02.08** – Type of sub-page that the display returns to after P02.06 has elapsed.

M03 – PASSWORD		UoM	Default	Range
P03.01	Enable passwords		ON	OFF-ON
P03.02	User-level password		1000	0-9999
P03.03	Advanced-level password		2000	0-9999

**P03.01** – If set to OFF, password management is disabled.

**P03.02** – With P03.01 active, value to specify to activate user-level access. See Password-Protected Access section on page 5.

**P03.03** – As P03.02, with reference to Advanced-level access.

M04 – SPI THRESHOLDS		UoM	Default	Range
P04.01	MAX V threshold 59.S2	%	115	100 - 130
P04.02	MAX V threshold 59.S1	%	110	100 - 120
P04.03	MIN V threshold 27.S1	%	85	20 - 100
P04.04	MIN V threshold 27.S2	%	40	5 - 100
P04.05	MAX V delay 59.S2	s	0,20	0,05 - 5,00
P04.06	MAX V delay 59.S1	s	3,00	0,20 - 10,00
P04.07	MIN V delay 27.S1	s	0,40	0,05 - 5,00
P04.08	MIN V delay 27.S2	s	0,20	0,05 - 5,00
P04.09	MAX F threshold 81>.S2	Hz	51,50	50,0 - 52,0
P04.10	MAX F threshold 81>.S1	Hz	50,50	50,0 - 52,0
P04.11	MIN F threshold 81<.S1	Hz	49,50	47,0 - 50,0
P04.12	MIN F threshold 81<.S2	Hz	47,50	47,0 - 50,0
P04.13	Long MAX F delay	s	1,00	0,05 - 5,00
P04.14	Short MAX F delay	s	0,10	0,05 - 5,00
P04.15	Short MIN F delay	s	0,10	0,05 - 5,00
P04.16	Long MIN F delay	s	4,00	0,05 - 5,00
P04.17	Backup activation delay	s	0,5	0,1 – 10,0
P04.18	Local control		OFF	OFF - ON
P04.19	SPI restore time (reset)	s	0,08	0,04 – 300,00

**P04.01...P04.16** – Adjustment of trip thresholds and delay times defined by the CEI 0-21 standard.

**P04.17** – Maximum DDI opening waiting time, before DDI locking is recognised with consequent backup opening command.

**P04.18** – Local control setting via parameter. Operates in OR with the input of the corresponding function.

**P04.19** – DDI restore (reset) time. DDI reclosing delay time after all thresholds are ok again.

M05 – COMMUNICATION		UoM	Default	Range
P05.01	Serial node address		01	01-255
P05.02	Serial speed	bps	9600	1200 2400 4800 9600 19200 38400 57600 115200
P05.03	Data format		8 bit – n	8 bit, no parity 8 bit, odd 8 bit, even 7 bit, odd 7 bit, even
P05.04	Stop bits		1	1-2
P05.05	Protocol		Modbus RTU	Modbus RTU Modbus ASCII Modbus TCP
P05.06	IP address		000.000.000.000	000.000.000.000 - 255.255.255.255
P05.07	Subnet mask		000.000.000.000	000.000.000.000 - 255.255.255.255
P05.08	IP port		1001	0-9999
P05.09	Gateway function		OFF	OFF/ON

**P05.01** – Serial address (node) for the communication protocol.

**P05.02** – Communication port bitrate.

**P05.03** – Data format. 7 bit setting position for ASCII protocol only.

**P05.04** – Number of stop bits.

**P05.05** – Communication protocol selection.

**P05.06, P05.07, P05.08** – TCP/IP details for applications with Ethernet interface. Not used with other communication module types.

**P05.09** – Gateway function enablement.

M06 – ALARMS		UoM	Default	Range
P06.01	Alarm A01 enablement		ON	ON - OFF
P06.02	Alarm A02 enablement		ON	ON - OFF
P06.03	Alarm A03 enablement		ON	ON - OFF
P06.04	Alarm A04 enablement		ON	ON - OFF
P06.05	Alarm A05 enablement		ON	ON - OFF
P06.06	Alarm A06 enablement		ON	ON - OFF

**P06.01...P06.06** – Enables or disables the corresponding alarm.

**Note:** The use of the auxiliary feedback contact on the DDI is recommended even in applications where the backup device is not used. If not even the feedback contact is used however, it will be necessary to deactivate alarm A03 by setting P06.03 to OFF.

#### COMMANDS MENU

- The Commands Menu is used to perform occasional operations, like resetting measurements, counters, alarms, etc.
- If the Advanced-level access password was entered, the Commands Menu can also be used to perform automatic operations useful for configuring the instrument.
- The following table shows the functions which are available with the Commands Menu, divided according to the required access level.

CODE	COMMAND	ACCESS LEVEL	DESCRIPTION
C.01	RESET HI-LO	User / Advanced	Resets the HI and LO values of all measurements
C.02	RESET TRIP COUNTERS	User / Advanced	Resets the trip counters
C.03	RESET PARTIAL ENERGY METERS	User / Advanced	Resets partial energy meters.
C.11	RESET TOTAL ENERGY METER	Advanced	Resets total and partial energy meters and tariffs
C.12	PARAMETERS TO DEFAULT	Advanced	Restores all settings to factory default values
C.13	PARAMETER BACKUP	Advanced	Saves a backup copy of the settings
C.14	PARAMETERS RESTORE	Advanced	Reloads the settings from the backup copy
C.15	TEST THRESHOLD 27.S2	Advanced	Temporarily shifts threshold 27.S1 to permit testing of threshold 27.S2. See note below.

**Note:** The purpose of command C.15 is to permit testing of threshold 27.S2 via relay test kit. This threshold is normally "covered" by 27.S1 and consequently cannot be tested according to the procedures indicated by the standard. Giving this command sets threshold 27.S1 temporarily to the minimum permitted value (20% Un), lower than the default value of 27.S2 (40%Un) so as to permit it to be tested. This shift in the threshold lasts for a maximum of 5 minutes, during which the shifted value is visible on the Active Thresholds page. Switching the PMVF 51 off then on or waiting for the period to elapse (sufficient for performing the test) brings threshold 27.S1 back to its normal set value.



## ALARM INDICATIONS

- In the event of an anomaly, the PMVF 51 indicates the situation with a pop-up window.
- If the user presses buttons on the front, the alarm is hidden temporarily to permit consultation of the screens.
- The alarm remains while the anomaly is present.

CODE	ALARM / INDICATION	DESCRIPTION / POSSIBLE CAUSES
A01	EXTERNAL SIGNAL / LOCAL CONTROL COMBINATION NOT PERMITTED	External Signal and Local Control both OFF (combination not envisaged by the standard). The Local Control must be ON (shunted) if required by the operating regulations. If the Local Control is OFF, then the External Signal must be ON.
A02	DDI OPENING FAILURE	The SPI sends the opening command to the DDI, but the auxiliary (feedback) contact is closed, so the SPI sends an opening command to the backup. Check the operation of the DDI and of its auxiliary (feedback) contact.
A03	DDI CLOSING FAILURE	<ul style="list-style-type: none"> <li>- The SPI has ordered the closing of the DDI but it does not close (check OUT1 wiring and/or DDI coil).</li> <li>- The auxiliary DDI contact (feedback) is not working.</li> <li>- The auxiliary DDI contact (feedback) is not connected correctly to terminal INP1.</li> <li>- The auxiliary DDI contact (feedback) is not fitted since it is not envisaged in the scheme.</li> </ul> Disable alarm A03 by setting P06.03 to OFF. Note: LOVATO Electric recommends the use of the feedback input.
A04	INCORRECT MODULE HW CONFIGURATION	PMVF 51 has not found the required expansion modules. Check that they are configured correctly at the side as in the figure on page 11.
A05	LSP1 TRIP - PRESS ▲ ▼ TO RESTORE	Power Imbalance Limit protection LSP1 has tripped. Automatic time-based or manual reset.
A06	LSP2 TRIP - PRESS ▲ ▼ TO RESTORE	Power Imbalance Limit protection LSP2 has tripped. Automatic time-based or manual reset.


- All the alarms/warnings except A04 are non-retentive, i.e. they reset when the anomaly is no longer present after the corresponding reset times.
- In the presence of a non-retentive alarm, the equipment continues to operate in any case.
- Exit OUT4 can be programmed to indicate the presence of any alarm (global alarm function).

## SELF-DIAGNOSIS


- The PMVF 51 features a series of self-diagnosis checks. If any of these checks is unsuccessful, a window displaying the text System Error Exx is displayed, where xx indicates the reason for malfunction. Should this indication occur, contact our Customer Service office (Tel. + 39 035 4282422; E-mail: service@LovatoElectric.com), stating the code indicated.

## CURRENT, POWER AND ENERGY MEASUREMENTS

- If CTs are connected to the current inputs and their reading is enabled by setting parameter P01.01 to a value other than OFF, the equipment will measure currents, powers and energies that, depending on where the CTs are positioned may refer to energy exchange (CTs positioned on the delivery point) or to the energy produced (CTs positioned on the genset line).
- The active power produced (exported, i.e. transferred to the grid) **will be displayed with conventional minus sign** (e.g. - 6.5 kW). The quantity of energy produced by the genset will be added to the exported energy meter.

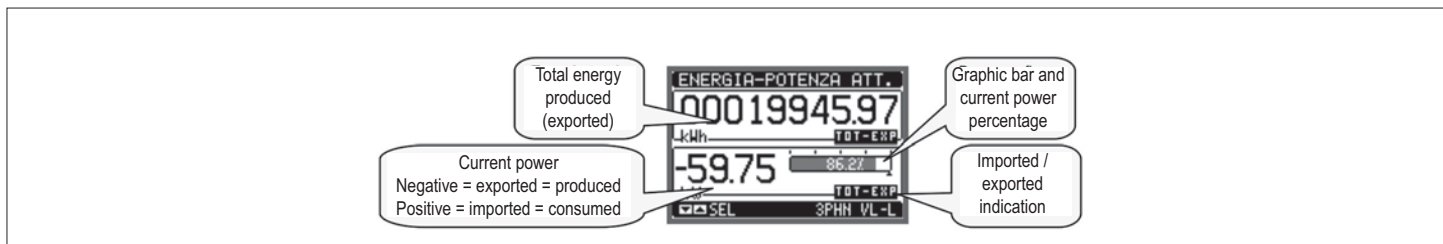


- There is also a page called Trend Graph which displays the trend in energy production in the last 24 hours (see below).

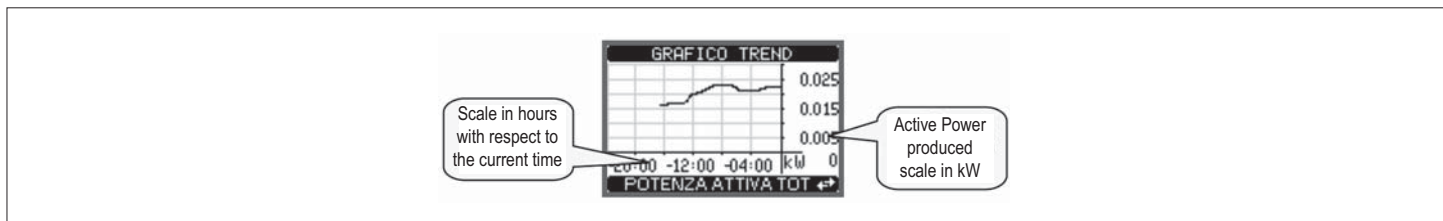

- The power measurements permit monitoring of the genset production parameters and making them available on the display or to any supervision system that can read them through one of the supported optional communication modules.

## POWER IMBALANCE LIMIT (LSP) CONTROL

- In three-phase+neutral systems, with CTs installed, the PMVF 51 can also be programmed to carry out the Power Imbalance Limit (LSP) function, as specified in chapter 8.3.1.2 of CEI 0-21.
- In this case, when an imbalance is measured between the phase active powers (difference between the highest and lowest powers) of more than 6 kW for a time > 30 mins or an imbalance of more than 10 kW for a time > 1 min, LSP protection trips.

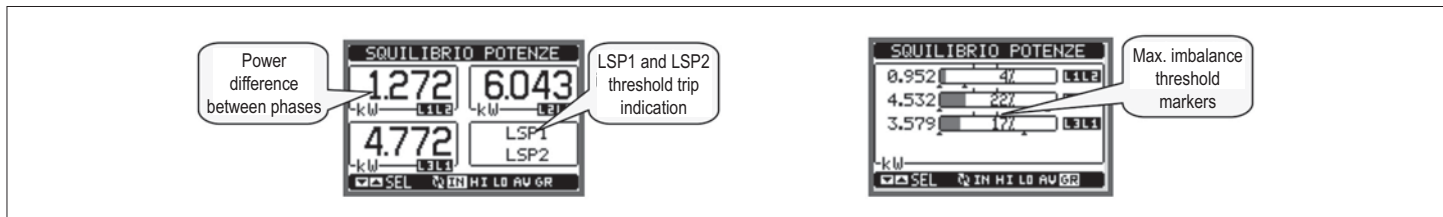

- This protection can be programmed to open relay OUT3 or to open the DDI via output OUT1.
- See set-up parameters P01.06 to P01.11 (MENU M01 - GENERAL on page 6).
- LSP protection tripping is highlighted by A05 and A06 appearing on the display (for LSP1=6 kW and LSP2=10 kW imbalance thresholds respectively).
- It is possible to restore manually by pressing the ▲ ▼ buttons simultaneously, or automatically by waiting for the time set with P01.11.

## COMMUNICATION


- The PMVF 51 can be fitted with an optional standard communication module from those listed below. When a communication module is installed, it must be configured through the dedicated M05 - COMMUNICATION MENU on page 8.
- The protocol currently supported is Modbus in the RTU, ASCII and TCP variants.
- The equipment is already prepared for communication in accordance with the IEC/EN 61850, possible via installation of a dedicated module.

MODULE TYPE	CODE	FUNCTION	MAX. No.
COMMUNICATION	EXM 10 10	USB	1
	EXM 10 11	RS232	
	EXM 10 12	RS485	
	EXM 10 13	ETHERNET	

## CONNECTION SCHEMES


Three-phase connection with or without neutral

P01.03 = Three-phase...

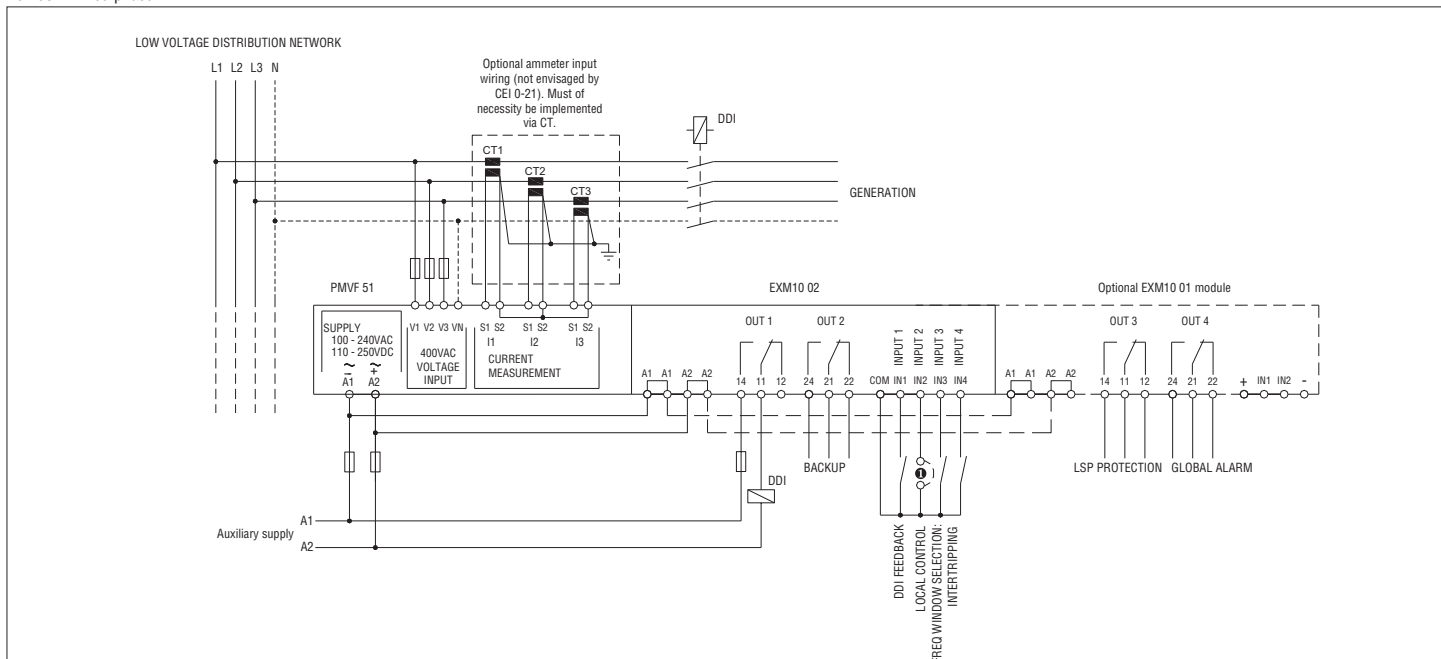

Single-phase connection (not applicable where PMVF 51 compliance with CEI 0-21 is required).

P01.03 = Single-phase

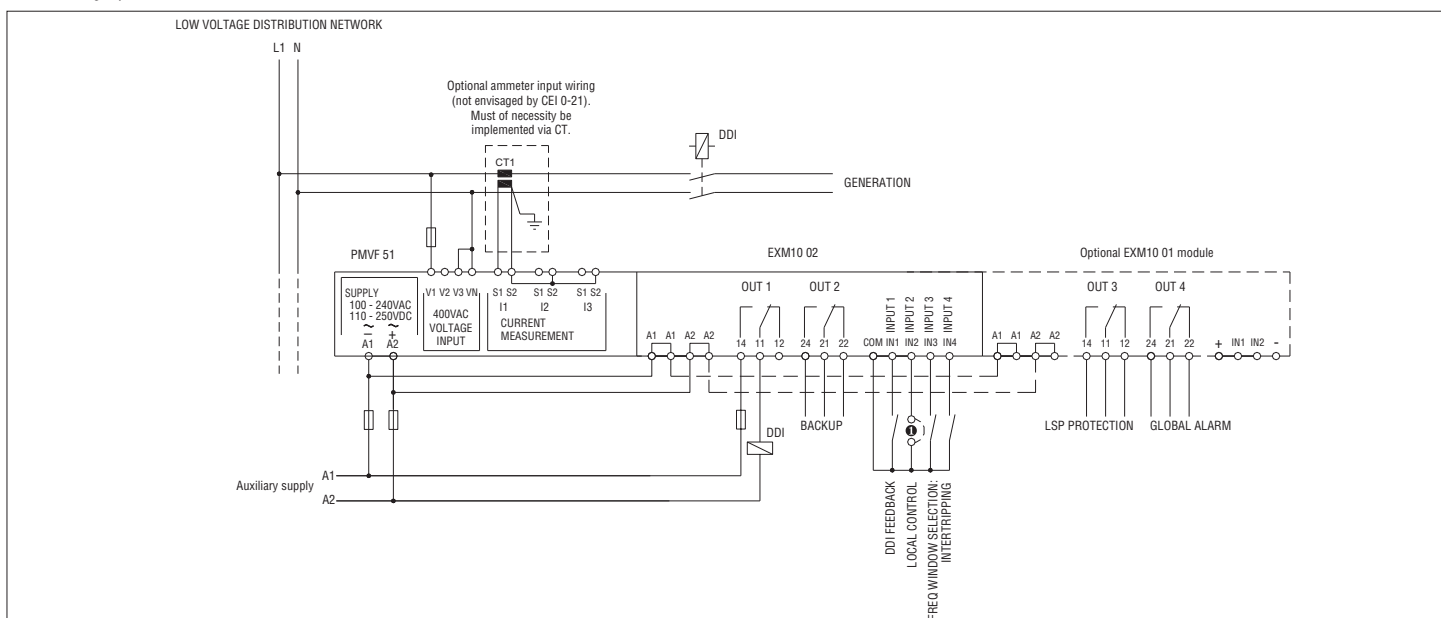

## NOTES

- Local control selection.

- Recommended fuses:  
Auxiliary supply and voltage measurement input: F1A (fast).  
Contactor control: MAX F5A (fast).
- The S2 terminals are connected to each other internally.
- The auxiliary DDI contact (feedback) must of necessity be connected.
- In the case of multiple DDIs, the DDI feedback contact must be a parallel connection of all the DDIs' auxiliary contacts.
- In single-phase wiring, connect terminal V3 to VN.




**ATTENTION: terminals A1 and A1 of EXM modules... are connected internally, as are terminals A2 and A2.**

The free A1 and A2 terminals can be used solely for supplying other EXM modules... (Max. 3).

Maximum current 500 mA.


Maximum protection fuse current: F1A.

BACKUP ACTIVATION MODES

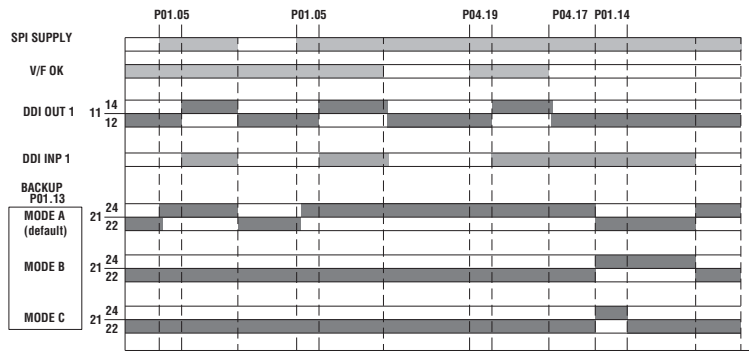


**Note:** The default backup control mode is A. See parameter P01.13 ( M01 - GENERAL MENU on page 6).

TERMINAL LAYOUT

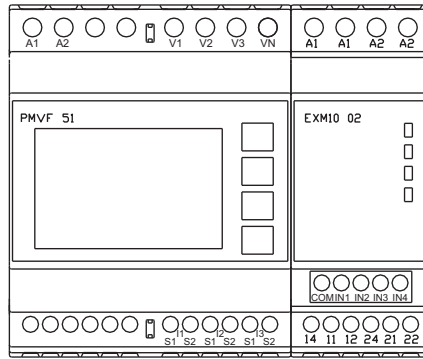

MECHANICAL DIMENSIONS [mm]

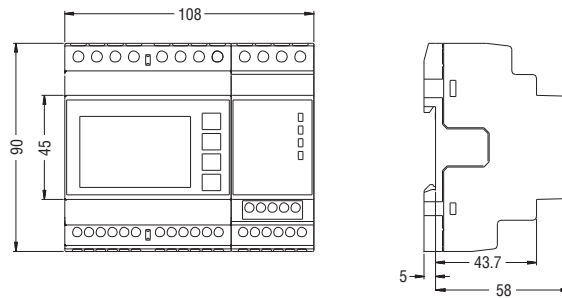

## TECHNICAL SPECIFICATIONS

**Auxiliary supply**

Rated voltage Us	100 - 240 V~ 110 - 250 V=
Operating range	85 - 264 V~ 93.5 - 300 V=
Frequency	45 - 55 Hz
Power consumption/dissipation	Us 110 V~ 4.6 VA 2.5 W max. Us 230 V~ 12.5 VA 2.7 W max. Us 110 V= 23 mA 2.3 W max. Us 250 V= 11 mA 2.5 W max.
Immunity time for microbreakings	≤200 ms with Us 240 VAC ≤50 ms with Us 100 VAC
Rated insulation voltage Ui	250 V~
Overvoltage category	II
Insulation	Test type Uimp AC 50 Hz 4.8 kV 2 kV

**Voltmeter inputs**

Input type	Three-phase + neutral
Max. rated voltage Ue	400 V~ phase-to-phase 230 V~ phase-to-neutral
Measuring range	20 - 480 V~ phase-to-phase 10 - 276 V~ phase-to-neutral
Rated frequency	50 Hz
Frequency range	45 - 55 Hz
Measurement type	True root mean square (TRMS)
Connection method	Three-phase with or without neutral
Rated insulation voltage Ui	400 V~
Overvoltage category	IV
Insulation	Test type Uimp AC 50 Hz 7.3 kV 2 kV

**Ammeter inputs (optional)**

Rated current Ie	1 A~ or 5 A~
Measuring range	for 5 A scale: 0.010 - 6 A ~ for 1 A scale: 0.010 - 1.2 A~
Input type	Shunt supplied by an external current transformer (low voltage) 5 A max.
Measurement type	Root mean square (RMS)
Overload capacity	+20% In
Overload peak	50 A for 1 second
Burden (per phase)	≤ 0.6 W

**Accuracy**

Measuring conditions	
Temperature	+23 °C ± 2 °C
Phase voltage	±0.2% (160...480 V~) ±0.5 digit ±0.5% (50...160 V~) ±0.5 digit
Phase-to-phase voltages	±0.2% (277...830 V~) ±0.5 digit ±0.5% (80...277 V~) ±0.5 digit
Current	±0.2% (0.1...1,2 In) ±0.5 digit
Active energy	Class 0.5s (IEC/EN 62053-22)
Reactive energy	Class 2 (IEC/EN 62053-23)

**Additional errors**

Temperature	0.03%/°K per V, A, W
-------------	----------------------

**Relay outputs**

Number of outputs	<b>2</b>
Output type	1 switching contact
Rated operating voltage	250 V~
IEC/EN 60947-5-1 designation	C300 / NO contact AC1 5 A 250 V~ - 5 A 30 V= NC contact AC1 2 A 250 V~ - 2 A 30 V=
Electrical endurance	NO contact 2x10 <sup>4</sup> operations NC contact 10 <sup>4</sup> operations
Mechanical life	10 <sup>7</sup> operations
Overvoltage category	II
Insulation	Test type Uimp AC 50 Hz 4.8 kV 2 kV

**Digital inputs**

Number of inputs	4
Input type	Positive (PNP)
Voltage present on inputs	12 V= isolated
Input current	7 mA
Low input signal (ON)	≤1.5 V (2.9 V typical)
High input signal (OFF)	≥5.3 V (4.3 V typical)
Rated insulation voltage Ui	12 V=

**Ambient conditions**

Operating temperature	-20 - +60 °C
Storage temperature	-30 - +80 °C
Relative humidity	<80% (IEC/EN 60068-2-78)
Maximum degree of ambient pollution	2
Altitude	≤2000 m

**Voltage measurement/power supply circuit connections**

Terminal type	Screw-type (fixed)
No. of terminals	2 + 4 for supply 4 for voltage measurement
Cable cross section (min. & max.)	0.2 - 4.0 mm <sup>2</sup> (24 - 12 AWG)
Tightening torque	0.8 Nm (7 lbin)

**Current measurement circuit connections**

Terminal type	Screw-type (fixed)
No. of terminals	6
Cable cross section (min. & max.)	0.2 - 2.5 mm <sup>2</sup> (24 - 12 AWG)
Tightening torque	0.44 Nm (4 lbin)

**Relay output connection**

Terminal type	Screw-type (fixed)
No. of terminals	6
Cable cross section (min. & max.)	0.2 - 2.5 mm <sup>2</sup> (24 - 12 AWG)
Tightening torque	0.44 Nm (4 lbin)
Isolation between the 2 relay outputs	Screw-type (fixed)

**Digital input connection**

Terminal type	Screw-type (removable)
No. of terminals	5
Cable cross section (min. & max.)	0.2...2.5 mm <sup>2</sup> (24 - 12 AWG)
Tightening torque	0.5 Nm (4.5 LBin)

**Housing**

Version	6 modules (DIN 43880)
Fitting	35 mm rail (IEC/EN60715) or screw-type by means of clips removable
Material	Polyamide RAL 7035
Degree of protection	IP40 front IP20 housing and terminals
Weight	580 g

**Certifications and compliance**

Compliance with standards	CEI 0-21 (September 2014), CEI 0-21;V1 (December 2014)
---------------------------	---

- Single insulation between the relays. Both the relay outputs must be used with the same voltage unit.

